



AUX.DX1

Borek
EX 10

kláves.2xline
CDM11.12
EX.8.9

4x220v

EC.3

Mic.EC3 EX 7

AUX DX3

EXPANDER BICI

1.kicks
2.snares
3.toms 1
4.floor
5+6 OVH

4x220v

2x220v

BASA
PEPA
EXP 15

BASA
MATKO
EXP 16

EX.13.PEPA

EX14.MATKO

AUX .DX 4

17 AC1 , 18 AC2 , 20.MAND.

EC.1

mic7.EC

PETR
EX 11

AUX DX 2

9.SAX SOP.

MICHAL

10.SAX TEN.

29. AC IVOS

24. IVOŠ

EC.2

5.VLASTA 2

8 EC.2

4x220v

2.MATES

22.KAREL

23.BLANKA

KEY 4 31+32
LR

4X220V

CDM32 AUX
10.XLR

ROLAND XP 30
KORG TRITON
2xline Jack
13+14-15+16

4x220

AUX.4

19.XLR.AC3.

AUX1.

AC KAREL 28

AUX2 ZEM+
AUX 5.XLR ST.

2X220V

AUX XLR 6
STOJAN

4.VLASTA 1

AUX 3.